



Flatliner V2.0-r3C

Changing from 9VAC to 12VAC

1. Disconnect the AC power cord **first** !
2. Loosen the 5 screws, Don't forget the one on the back.
3. Remove the cover and ground cable (yellow/green)
4. Connect the green and brown cable as is shown on the pictures.
5. Close the Flatliner, back-screw last.
6. Don't forget to put the ground cable (yellow-green) back on the cover clip

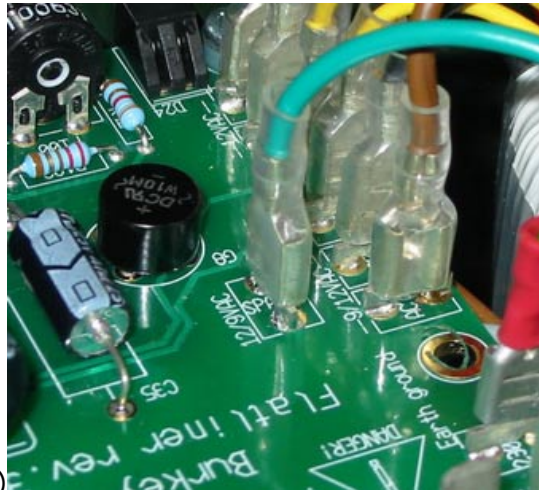

This is 9VAC (standard)

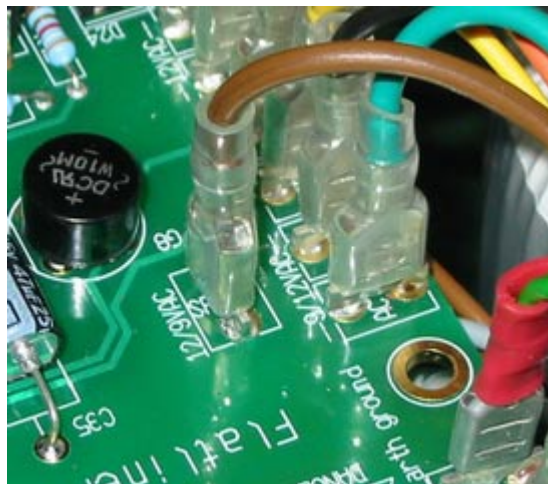

This is 12VAC